




APPLICATION INSTRUCTIONS

1. REMOVE EXISTING CAP




Along the TOTAL Ridge.

2. STRIKE LINE

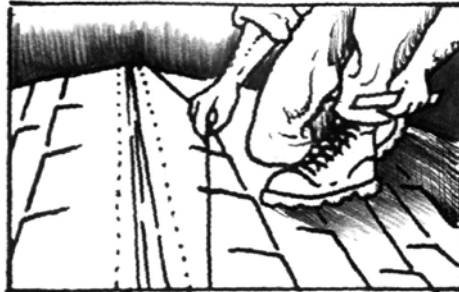

3/4" along both sides of Ridge to provide an opening total of 1 1/2".

3. CUT DECKING

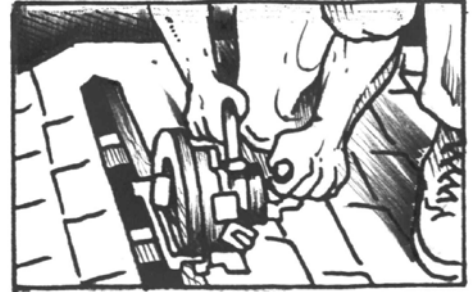

STAY 12" away from gable ends & obstructions: Chimneys, valleys, & cross ridges.

CAUTION:
DO NOT CUT DECK SUPPORT MEMBERS.

4. INSTALL VENT




Along the entire ridge. Leaving a 3/16" gap between sections (for expansion) Place end plugs at open ends.

5. SECURE VENT



By following the nail guide line secure at 9" intervals. Using a minimum of 2" coated or ribbed nails.

6. CUTTING

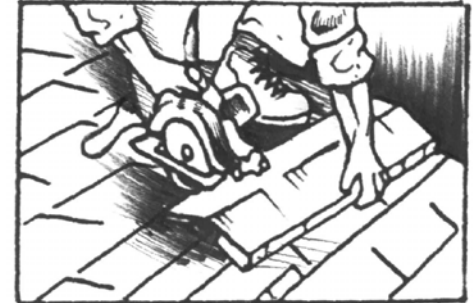

Vent may be cut with saw or construction shears. Keep factory cut to outside when installing.

7. INSTALL RIDGE CAPS



Install in normal fashion as recommended by the shingle manufacture.
Nails Should penetrate the sheathing.

ADDITIONAL RECOMMENDATIONS

1. In new construction Step one not required, it is recommended that full sheets of decking be used at the ridge and covered with roofing material.
2. When installing continuous ridge vents it is recommended that continuous soffit vents be used.
3. Ridge vents must have adequate soffit intake air. It is recommended that a minimum of 50% of air comes from soffits.
4. Attic insulation baffles should be installed in every rafter.
5. No other attic vents should be used in conjunction with continuous ridge vents.

ALWAYS WEAR SAFETY GLASSES